
Ovladač **Multi**: Snadná kopie Vašeho dálkového ovladače!

Úvod

Tento přístroj je schopen duplikovat několik druhů dálkového ovládání pro brány, garážová vrata, závory, které vysílají na frekvencích mezi 433 a 868 MHz. Každé tlačítko je nezávislé, takže je možno duplikovat až 4 různé dálkové ovladače, i když pracují na různých frekvencích. Použitelnost (podporu) ovladače MULTI pro Váš stávající systém je nutno zkontrolovat v příloženém seznamu (v položce *Podporuje* musí být **Multi**).



 
Kopírování (duplikování)

 
 
 
1. Současně stisknout tlačítka 1 and 2, dokud LED nesvítí zeleně.
2. Pustit tlačítka.
3. Stisknout krátce tlačítko pro cílové nastavení na ovladači MULTI.
4. Vyslat kód (stisknout tlačítko) z originálního ovladače a držet stisknuté tlačítko ve vzdálenosti 10cm
5. Pokud je duplikace dokončená, blikne na ovladači MULTI led červeně dvakrát pro pevný kód nebo čtyřikrát pro plovoucí kód. Pokud led svítí zeleně, je duplikace připravena od bodu 3 pro další tlačítko.
6. Po dokončení duplikace (led zhasne) vyzkoušet každé tlačítko dvakrát pro ověření správné funkčnosti.

 
 
Stav baterie

 
 
 
 
Pokud při vysílání nebo duplikování obě LED blikají (střídavě zeleně a červeně), je napětí baterie nízké a baterie je téměř vybitá. Pokud LED svítí pouze zeleně, ovladač již nevysílá a je nutno okamžitě vyměnit baterii. Výměnu baterie provedete po odšroubování a sejmutí krytu za baterii stejného označení CR2032, pokud možno s kapacitou 2400mA.

 
Výpis kopírovatelných ovladačů (kompatibilních) pro systém MULTI, nebo FOUR

 
 
 
Firma	Frekvence	Model	Fotografie	Podporuje:
ADYX	433.920	ALIZE EM2C, ALIZE EM4C		Multi, Four
AETERNA	433.920	T 433 1,2,4 buttons		Multi, Four
ALLMATIC	306.000	A MX2, ASMX4		Multi
	433.92	AEMX1, AEMX2, AEMX4		Multi, Four
		EUROPE AUTO ARMY1, ARMY2, ARMY4		Multi, Four
		MX1, MX2, MX4		Multi, Four
ALLISTER	318.000	9931-318, 9931T-318		Multi
ALLSTAR	288.000	111025 Allister Pulsar Quickcode		Multi
		9921T-288, 9921MT, 9921TK, 9922T-288, 9923T-288, 9931-288, 9931T-288, 9931MT, 9931TK, 9931TK6, 8831T-288, 8832T-288, 8833T-288, 8821T-288, 8822T-288, 8823T-288, 8832TK 8833OCS-288		Multi
	318.000	9921T-318, 9921MT, 9921TK, 9922T-318, 9923T-318, 9931-318, 9931T-318, 9931MT, 9931TK, 9931TK6, 8831T-318, 8832T-318, 8833T-318, 8821T-318, 8822T-318, 8823T-318, 8832TK		Multi
		110995 Allister Pulsar Quickcode		Multi
		8830OCS-318		Multi
ALLTRONIK	433.920	S429_1, S429_2, S429_4, S429_M Be sure that your remote operates at 433.92MHz!		Multi Rev.3, Four Rev.3
		S425		Multi Rev.3, Four Rev.3
ANSONIC	433.920	SA 434-1E, SA434-2E, SA434-3E, SA434-4E		Multi, Four
		SA 434-1MINI, SA434-2MINI, SA 434-2Midi		Multi, Four

	868.350	SA 868-1E, SA 868-2E, SA868-3E, SA868-4E		Multi
		SA 868-1mini/M, SA 868-2mini/M (dip switch version)		Multi
APERTO	433.920	CPS1, CPS2, CPS4		Multi, Four
APRIMATIC	305.000	TS1, TS2		Multi
AUTELCO	286-306	TX300T		Multi
AVIDSEN	433.920	100601 micromark MM23164		Multi, Four
		104505		Multi, Four
		100951, 100955, 100550, 100400		Multi, Four
B&D BnD BD	433.920	062170/4333EBD, 062171, 4333A		Multi, Four
		062162		Multi, Four
		PTX4 059120 / 059116		Multi, Four
BANDY	433.920			Multi, Four
BELFOX	433.920	DHS433-1, DHS433-2, DHS433-4, dip switch vision		Multi, Four
		DHS 433,92 (7733), dip switch version		Multi, Four
	868.350	DHS 868,3, dipswitch vision		Multi
		HS 868-20		Multi
BENINCA'	306.000	LOT1A, LOT2A, LOT4A		Multi
		LOTX1A, LOTX2A, LOTX4A		Multi
		LO.TX2PS		Multi
	433.920	LOT1W, LOT2W, LOT4W		Multi, Four

 
 
 
		LOT2WMS		Multi, Four
		T2WK, T4WK		Multi, Four
		LOTX1W, LOTX2W, LOTX4W		Multi, Four
		TO.GO2WP, TO.GO4WP, TO.GO2WK, TO.GO4WK		Multi, Four
BESIDE	433.920	BEZAP		Multi, Four
		HIT		Multi, Four
BETA ELETTRONICA	315.000	BETALARM 6500		Multi
	330.000	BETALARM 5500		Multi
BFT	306.000	RCS		Multi R3
	315.000	VTM1, VTM2, VTM4		Multi
	418.000	GT01, GT02, GT04		Multi
	433.920	TE01, TE02 (TEO1, TEO2)		Multi, Four
		TE04 (TEO4)		Multi, Four
CAME	315.000	T312M, T314M		Multi
	433.920	T432, T434, TOP432A, TOP434A, TOP432, TOP432NA, TOP434NA, TAM432, TAM434, TAM438		Multi, Four
		TOP432M, TOP434M		Multi, Four
		TAM432SA		Multi, Four
		TOP432SA		Multi, Four
		TOP432NA		Multi, Four
		TWIN2, TWIN4		Multi, Four

 
 
 
 
CARDIN	300.000	S300		Multi
	310.000	S301, S302		Multi
	433.920	S476 TX2, S476TX4		Multi, Four
CARPER	300.000	C300, C310, C318, C318T		Multi
	310.000			
	318.000			
CASALI GENIUS	330.000			Multi
	433.920	Genius 433 2, Genius 433 3, JA400 TM433, JA401 TM433		Multi, Four
CASIT	306.000	ERTS92B, ERTS92T		Multi
	433.920	ERTS92B, ERTS92T		Multi, Four
		ERTS20DB, ERTS20DQ		Multi, Four
		ERTS476D, ERTS476Q		Multi, Four
		TXS1, TXS2, TXS3, TXS4, TXS6 ERTS97B, ERTS97T		Multi, Four
CELINSA	433.920	S10 1, S10 2, SAW1, SAW2		Multi, Four
CENTURION	433.920	CLASSIC, SMART, SMART2		Multi, Four
CHAMBERLAIN LIFTMASTER MOTORLIFT SEARS CRAFTSMAN	300.000	Chamberlain 300MC (multicode)		Multi
	315.000	333LM		Multi
		360LM, 362LM, 363LM		Multi
	390.000	50CB, 53CB, 750CB, 753CB, 50LM, 53LM, 61LM, 62LM, 63LM, 139.53100, 139.53110, 139.53200, 139.53210		Multi
		54CB, 756CB, 54LM, 64LM, 859CB		Multi
		850CB, 853CB, 959CB, 81LM, 82LM, 83LM, 84LM, 99LM		Multi

		33LM		Multi
	418.000	4180, 4182, 4183		Multi
		4185		Multi
		787 remote keyless entry		Multi
	433.920	4330E, 4332E, 4333E		Multi, Four
		4335E		Multi, Four
CPS	433.920	TCP3, CPS, Jolly 4		Multi, Four
		CPS1 TCP3, CPS2 TCP3, CPS4 TCP3 EM1CV, EM2CV, EM4CV		Multi, Four
DASPI	433.920	Happy2, Pops2Ã,		Multi, Four
DEA	306.000	306 1, 306 2, 306 4		Multi
		306		Multi
	433.920	433 1, 433 2, 433 4, Gold S1, Gold S2		Multi, Four
		Genie		Multi, Four
		Punto S2		Multi, Four
		Dea MIO TD2, MIO TD4		Multi, Four
DELMA	300.000	Apollo 300, ELSAMEC Apollo 300		Multi
		Mizard 300 1, Mizard 300 2, King		Multi
	433.920	Mizard 433 1, Mizard 433 2		Multi, Four
		King 433 2		Multi, Four

 
		Style Copy 2CH (this is a code duplicator)		Multi, Four
DICKERT	433.920	MAHS433 01, MAHS433 04		Multi, Four
		S10-433A1L00, S10-433A4L00, S20-433A1L00, S20-433A4L00, S20-433A1000, S20-433A4000		Multi, Four
		S5-433-A2L00, S5U-433-A2L00		Multi, Four
	868.350	HS868-21		Multi
		S5-868A2L00, S5U-868A2L00		Multi
		S10-868A100, S10-868A400, S20-868A1L00, S20-868A4L00, S20-868A1000, S20-868A4000		Multi
DIGICODE	300.000 310.000	DC5010, DC5012, DC5030, DC5032, DC5040, DC5042, DC5060, DC5062, DC5070, DC5072		Multi
DITEC	433.920	GOL4C		Multi, Four
		GOL4 Poznámka: Tento ovladač je s plovoucím kódem a nelze duplikovat, ale These transmitters are rolling code and cannot be duplicated, but if you have a GOL4C device, you can duplicate it on Four or Multi, and it works with all the DITEC receivers.		Multi, Four
		BIX LS2, BIX LP2, BIX LG4 Note: These transmitters are rolling code and cannot be duplicated, but if you have a GOL4C device, you can duplicate it on Four or Multi, and it works with all the DITEC receivers.		Multi, Four
DOITRAND FDOITRAND	433.920	MPSTF2E JAUNE, MPSTF4E, HYPERPHONE MPSTF2E_GRISE		Multi, Four
		TS2DE, TS4DE		Multi, Four
DOORMATIC	433.920	SAW		Multi, Four
DUCATI ALLDUCKS	433.920	TSAW1, TSAW2, TSAW3, TSAW4, 124 ELBER TSAW1, TSAW2, TSAW3, TSAW4 RONDY TSAW1, RONDY TSAW2, RONDY TSAW3		Multi, Four

 
		TPR10-A, TPR20-A RONDY TPR10_A, RONDY TPR20_A		Multi, Four
		TE2		Multi, Four
		HC6203, 6203: only blue , red and transparent		Multi, Four
ELBE	433.920	501, 502, 504		Multi, Four
		502a, 504a		Multi, Four
		502, 504		Multi, Four
ELCA	300.000	Aster 1100, Aster 1101		Multi
	433.920	IRIS, IRIS 9CH. Both colors red and blue		Multi, Four
		ASTER2		Multi, Four
		Aster 1000, Aster1001. Colors: black, blue, light grey		Multi, Four
		GEMINI 9CH		Multi, Four
		VIRGO		Multi, Four
ECP	292.000	FIX 292 MHz F105611		Multi
		KEY 292 MHz F106038		Multi
ELEK	300.000	KTM194B		Multi
		KTR4		Multi
ELVOX	433.920			Multi, Four
		ET03, ET04		Multi, Four

 
	868.350	ET08		Multi
EMFA	287.000	ET1, ET2, ET3		Multi
	308.000	ES_1, ES_2		Multi
ERONE	433.920	SETDS39433E2, SETDS39433E4		Multi, Four
FAAC	300.000	TM300S, TM300S05 H		Multi
	315.000	T1, T2, T3		Multi
	330.000	TM1, TM2, TM3		Multi
	418.000	TM1 418 DS, TM2 418 DS, TM3 418 DS		Multi
		TM 418SL, TM1 418SL, TM2 418 SL, TM3 418SL		Multi
	433.920	TM1 433 DS, TM2 433 DS, TM3 433 DS		Multi, Four
		TML2 433 SLR, TML4 433 SLR, TML2-433-SLR, TML4-433-SLR		Multi, Four
		TML2 433 SLP, TML4 433 SLP, TML2-433-SLP, TML4-433-SLP		Multi, Four
	868.350	TM1 868 DS, TM2 868 DS, TM3 868 DS		Multi
FADINI BPT	315.000	ASTRO75-1, ASTRO75-2, ASTRO75-4		Multi
	433.920	433 2M, Astro43_2m		Multi, Four
		Astro433-2, Astro433-4, Astro43-2, Astro43-4		Multi, Four
FERPORT	433.920	Tac1, Tac2, Tac4, Tac1k, Tac2k, Tac4k, Tac2kr		Multi, Four
FUNKMODUL ELSECO	433.920	T433A2K1, T433A2K2		Multi, Four
		T433A2K4, T433A2K4n		Multi, Four
GIBIDI	306.000	TS2M		Multi
	433.920	Open TMB 433, OPEN TMQ 433, OPEN OUT 2, OPEN OUT 4		Multi, Four

 
GOBBATO	306.000	T306		Multi
GRIFFON	403.55	Griffon 404 MHz dip switch remotes and duplicating remotes		Multi
	433.92	Griffon 433 MHz dip switch remotes and duplicating remotes		Multi, Four
GTO	318.000	GTO Mighty Mule 1/2 buttons, RB741, RB742		Multi
		GTO Mighty Mule 3 buttons, RB743		Multi
GULLIVER	306.000	MDRQ 306		Multi
	433.920	MDW 2E		Multi, Four
HAUSS	433.920	Pocket 3750-1, Pocket3750-2, Pocket 3750-4		Multi, Four
HEDDOF	318.000	P219-1, P219-2		Multi
		P220-1, P220-2, P220-3		Multi
HORMANN HOERMANN	433.920	HSM2, HSM4, yellow buttons Nelze u verze s plovoucím kódem.		Multi
	868.300	HS1, HS2, HS4, blue buttons		Multi
		HSD2		Multi
		HSE2, HSE4, blue buttons		Multi
		HSM2, HSM4, blue buttons		Multi
		HSP4, blue buttons		Multi
		HSS2, HSS4, blue buttons		Multi

		HSZ1-868, HSZ2-868		Multi
HRC	433.920			Multi, Four
JAY	433.920	UBEI x1 SL1		Multi, Four
		UBET 11, UBET 21, UBET 31, UBET 41, UBET 61Å,		Multi, Four
JCM	290.000	EC1, EC2, EC3, ET1, ET2, ET3		Multi
KEY AUTOMATION	433.920	900TXB-42, 900TXB-42N, 900TXP-42, 900TXP-42N		Multi, Four
		900TXB-44, 900TXG-44		Multi, Four
		900SUB-44, 900SUB-44N, 900SUB-44W, 900SUB-44WN		Multi, Four
		900TXK-42, 900TXW-42, 900TXK-44, 900TXW-44		Multi, Four
KING	433.920	Poznámka: přijímač musí mít vypnutý plovoucí kód		Multi, Four
LABEL IUPPITER	306.000	MDR, IUPPITER 306		Multi
	433.920	RJW/1E, RJW/2E, RJW/4E, RJW/12E		Multi, Four
		MDW/1E, MDW/2E		Multi, Four
LEB	306.000	TSA4		Multi
	433.920	TMW		Multi, Four
		TSA 2N, TSAW4N		Multi, Four
		TCP3Å, (this is a code duplicator)		Multi, Four
		TRK4 Poznámka: na ovladači nutno vypnout plovoucí kód		Multi, Four

		TPW4		Multi, Four
	868.300	TPK4		Multi
LINCE	302.000	LE TX1, LE TX2		Multi
	433.920	LR 2035		Multi, Fou
LINEAR	300.000 310.000	MULTI-CODE 308911, 308913, 1089		Multi
		MULTI-CODE 412001, 414001, 109410, 109710		Multi
		MULTICODE 306010, 307010, 108210		Multi
		MULTI-CODE 308301, 308302		Multi
		MULTI-CODE 105015		Multi
	310.000	Delta3 Moore-o-Matic: DT, DT2, DT2A, DT22A, DTC, DTD		Multi
		Delta 3 Moore-o-Matic: DT3, DT4		Multi
		Delta 3 Moore-o-Matic: Mini-T LB "LadyBug"		Multi
	312.000	Delta3 DTK (canada)		Multi
MA SYSTEM	433.920	MA TX1, MA TX2, MA TX3		Multi, Four
MARANTEC	418.000	D212, D222, D232		Multi
	433.920	D101		Multi, Four
		D12		Multi, Four
		D212, D222, D232		Multi, Four
		Digital 302, D302		Multi, Four

 
 
 
		Digital 304, D304		Multi, Four
	868.300	Digital 302, D302		Multi
		Digital 304, D304		Multi
MEIßNER	433.920	LW433-1, LW433-2, LW433-4		Multi, Four
		Pocket 3750 1, 2, 4		Multi, Four
MONSEIGNEUR	433.920	ARC2, ARC4		Multi, Four
		TDR 400 3845, TDR 400 3846, TDR 400 3847 T1SAW433, T2SAW433, T4SAW433		Multi, Four
MOTORLINE STATEUROPE	433.920	MX1, MX2, MX3, MX4, MX6 MX11, MX12, MX13	 	Multi, Four
MOTOSTAR	433.920	CLIKSTAR2, CLICKSTAR4 CLICK-4M, CLICKSTAR RE 532, CLICKSTAR RE 534		Multi, Four
NICE	306.000	EASY S1, S2, S4		Multi
	433.920	FLO1, FLO2, FLO4		Multi, Four
		VERY VE		Multi, Four
NOLOGO	306.000			Multi
	433.920	ECO DIP		Multi, Four
NOVOTECNICA	306.000	BIT N1, BIT N2		Multi
		BIT NT1, BIT NT2, BIT NT4		Multi
OG	433.920	OG62, OG64		Multi, Four

O&O OeO, O and O	433.920	T-COM DS 4-2, T-COM DS 4-4		Multi, Four
OPENOUT	306.000	TS2M		Multi
	433.920	TMQ 433 2, TMQ 433 4		Multi, Four
PIAZZETTA	433.920	4 buttons for wood/pellet heater		Multi, Four
PORTAMATIC	433.920	MPH01, MPH02		Multi, Four
POWERFIX Profi (Lidl)	433.920	RCB-A 3600R		Multi, Four
PRASTEL	306.000	NCSMT1, NCSMT2P, NCSMT4P		Multi
		KMFT2P, KMFT4P, KMFT2P93, KMFT4P93		Multi
	433.920	MPSTF2E, MPSTF4E		Multi, Four
PROEM	433.920	ER2C4ACM, ER4C4ACM		Multi, Four
PROGET	433.920	ETY_433N2, ETY 433N4		Multi, Four
		EMI433-N2		Multi, Four
PROTECO	433.920	TX433		Multi, Four
		EUROMATIC		Multi, Four
		HIT		Multi, Four
PUJOL	288.000	JCM TRINARIO 1, TRINARIO 2, TRINARIO 3		Multi
	288.000	TT1, TT2, TRINARIO 1, TRINARIO 2		Multi
PULSAR	318.000	9931-318, 9931T-318		Multi

 
 
QUASAR	287.000	Tx SA4, Serie Argento, SA		Multi
	287.000	TXSA2T		Multi
	306.000	300 2, 300 4		Multi
	433.920	433 TANGO SLIM BLEU		Multi, Four
QUICK	433.92	Model: 302		Multi
RADIODIGIT	291.000	TBM, TCM		Multi
ROGER	433.920	R80/TX12, R80/TX14, R80/TX12R, R80/TX14R		Multi, Four
		H80/TX22		
		G80/TX32, G80/TX34, G80/TX32R, G80/TX34R		
SEA	433.920			Multi, Four
		SMART433_TX2_DIP, SMART433_TX3_DIP SMART433_TX2_COPY, SMART433_TX3_COPY Smart2 Dip Switch, Smart3 Dip Switch		Multi, Four
	868.350	231103, SEA868_4		Multi
		231103, Head2 Dip Switch		Multi
		SMART868-TX2-DIP, SMART868-TX3-DIP Smart2 Dip Switch, Smart3 Dip Switch		Multi
SEAV	306/330	TX1, TX2, TX3, TX4, TX1/330 TX2/330, TX3/330, TX4/330		Multi
	433.920	TXS1, TXS2, TXS3, TXS4		Multi, Four
		Behappy S1, Behappy S2, Behappy S3		Multi, Four
		Be Easy TX, Be Easy Murale2		Multi, Four
		BeSmart S2, BeSmart S4		Multi, Four
		BeFree S1		Multi, Four
	868.300	BeSmart H2, BeSmart H4		Multi

		BeFree H1		Multi
SECURVERA	433.920	SV R2C		Multi, Four
		SV R2C		Multi, Four
		SV R4C		Multi, Four
		SV R6C		Multi, Four
SENDER	433.920			Multi, Four
SENTRY MARTIN ELECTRONICS	403.550	SENTRY binary, SENTRY trinary		Multi
	433.920	SENTRY binary		Multi, Four
SERAI	310.000	OG/32		Multi
	433.920	OG/52, OG/54, OG/82, OG/84		Multi, Four
		OG/28, OG/48, OG/62, OG/64		Multi, Four
		OG/02, OG/04		Multi, Four
SICE	433.920	TX4 CLACK Bigfoot		Multi, Four
SIMINOR	433.920	ER2C4ACM, ER4C4ACM, ER2C4ACS, ER4C4ACS		Multi, Four
SKYLINK	300.000 310.000	MultiLink SD300M, Skylink 100, LD310M, SD310M		Multi
	318.000	Skylink Mtilink PD-318M		Multi
	390.000	Multilink CB-390M, CD-390M (versions compatible with Chamberlain)		Multi
SMD	433.920	LW433-1, LW433-2, LW433-4 : AM models only		Multi, Four

 
SOMFY	433.920	LEB TMW		Multi, Four
STAGNOLI	433.920	ZEUS AZTR		Multi, Four
	868.350	ZEUS AZTR		Multi
STANLEY	310.000	24286		Multi
		1082		Multi
		1050		Multi
		1094		Multi
		1097		Multi
STARTEC	433.920	TXQ2		Multi, Four
STINGER	300.000	300MCD21V, 300MCD22V	 diff. Colors	Multi
	310.000	310MCD21V, 310LID21V, 310LID22V		
	318.000	318ALD31V		
	390.000	390LMD21V, 390LMPB1V		
TAU	315.000	250 TXA2, 250 TXA4		Multi
	433.920	250 SLIM, 250K-SLIM, 250K-SLIMC		Multi, Four
		250TXD2, 250TXD4		Multi, Four
		250BUG2, 250BUG4		Multi, Four
		250T-4, 250T-4C		Multi, Four
TEC KEY	300.000	MK1010		Multi
TECNOMATIC	433.920	TQ433		Multi, Four
TEDSEN BERNER	433.920	SKX1KD, SKX2KD, SKX4KD, SKX6KD		Multi, Four

GFA		SKX1DL, SKX2DL, SKX3DL, SKX4DL		Multi, Four
		SKX1LC, SKX2LC, SKX3LC, SKX4LC		Multi, Four
		SKX1SL, SKX2SL, SKX3SL, SKX4SL		Multi, Four
		SKJ		Multi, Four
		SKX1WD, SKX2WD, SKX4WD, SKX11WD, SKX22WD, SKX44WD		Multi, Four
TELCOMA	306.000	RCS TP2		Multi R3
		RCST2, RCST4		Multi R3
	433.920	TANGO 2 SW, TANGO4 SW	 	Multi, Four
		TANGO BLUE 2, TANGO 4 BLUE, TANGO BLEU 2, TANGO BLEU 4		Multi, Four
		TANGO 2 N, TANGO 4 N		Multi, Four
		TANGO 2 SLIM, TANGO 4 SLIM		Multi, Four
		Telcoma Noire2, Noire4 Poznámka: Přepínač plovoucího kódu v ovladači nutno vyjmout		Multi, Four
		TANGO WIN3		Multi, Four
		TANGO2, TANGO4		Multi, Four
TELEMATIC	300.000	TL1, TL2		Multi
TKC	433.920	TSAW433		Multi, Four
TONKARR	287.000	TK2		Multi
TORAG	433.920	S429 1, S429 2, S 29 4		Multi, Four

TORMATIC DORMA	433.920	HS, Dorma HS43 1E, HS43 2E, HS43 3E, HS43 4E		Multi, Four
		MAHS, Siebau, Novoferm, Dorma		Multi, Four
		MHS, MHS43-1		Multi, Four
TREMA	433.920	TO93TV1, TO93TV2, TO93TV4		Multi, Four
TUBAUTO	433.920	DIGITAL 101 433		Multi, Four
V2	306.000			Multi
	433.920	PHOENIX series: Phoenix2, Phoenix2P, Phoenix4, Phoenix4P. Poznámka: ovladač nutno programovat v plovoucím kódu dle následující instrukce. Pokud se kód učí, LED 6 krát blikne.		Multi, Four
		TCP3		Multi, Four
		TCP3, ARC3		Multi, Four
		TCP3		Multi, Four
		TPR		Multi, Four
		T1SAW/433, T2SAW/433, T4SAW/433		Multi, Four
		TRR1, TRR2, TRR4		Multi, Four
		PMR2, PMR4		Multi, Four
	868.300	PHOENIX series: Phoenix2-868, Phoenix2P-868, Phoenix4-868, Phoenix4P-868. Poznámka: ovladač nutno programovat v plovoucím kódu dle následující instrukce. Pokud se kód učí, LED 6 krát blikne.		Multi

VISONIC	315.000	WT100, WT100A, WT101, WT101A, WT102, WT104, WT-201, WT-201A, WT-201WP, WT-201AWP		Multi
	418.000	WT-100, WT-100A, WT-101, WT-101A, WT-102, WT-104, WT-201, WT-201A, WT-201WP, WT-201AWP		Multi
	433.920	WT 100, WT 100A, WT 101, WT 101A, WT 102, WT 104, WT 201, WT 201A, WT 201WP, WT 201AWP	  	Multi, Four
VSEG	433.920	CR SLIM		Multi, Four
WAINE-DALTON	433.920	S429-1, S429-2, S429-4, S429-mini	 	Multi, Four
		S425		Multi, Four
WECLA CDS	433.920	433, 433_2		Multi, Four
ZULLAN	315.000	250TXA1H, 250TXA2H, 250TXA4H		Multi
OEM	315.000			Multi

Níže naleznete NEKOMPATIBILNÍ ovladače

Company	Frequency	Models	Photo	Notes
ALLMATIC	433.920	TECH3, BRO	Several different enclosures	Rolling code
APERTO	434.420	TX02-434-2		Rolling code
AVIDSEN	433.920	TOV		Rolling code
B&D	433.920	062170/4333EBD 1A4982		10 trinary
BFT	433.920	MITTO2, MITTO4		Rolling code
CARDIN	433.920	S435		Rolling code
		S438, S449		FM / FSK
	868.300	S486		FM / FSK
CHAMBERLAIN LIFTMASTER MOTORLIFT SEARS CRAFTSMAN	433.920	84335eml, 94335e		Rolling code
DICKERT	868.300	HS868-50 roltek		Rolling code
DUCATI ALLDUCKS	433.920	6203/R, 6203/P, 6204	Several different enclosures	Rolling code
EAZYMATIC	218.000			218 MHz
FAAC	868.300	TML2868SLH		Rolling code
		XT2868SLH, XT4868SLH		Rolling code
FADINI	868.350	BIRIO		Rolling code, programmed by palm
GENIUS CASALI	868.350	AMIGO JA332, AMIGO JA334		Rolling code
GLIDEROL	868.350	TM-868C		Rolling code (KeeLoq)
HORMANN	433.920	RS2-433, RS4-433 (Rolling code versions, usually sold in Netherlands)		Rolling code (KeeLoq)
MHOUSE	433.920	TX3, TX4		Rolling code
NICE	30-40	BT1K, BT2K, BT4K, K1M, K2M, K4M	Several different enclosures	30-40MHz

	433.920	SMILO SM2, SM4		Rolling code
		FLO1R-S, FLO2R-S, FLO4R-S		Rolling code
NORMSTAHL CRAWFORD	433.920	EA433		Rolling code
NOVOFERM	433.920	MNHS433, NOVOTRON 502,504		Rolling code
PROEM / SIMINOR	433.920	ER2C4ACM, ER4C4ACM, ER2C4ACS, ER4C4ACS		Rolling code
PRASTEL	433.920	MPSTP2E, MPSDT2E, MT2E, MT4E,		Rolling code
PUJOL	433.920	P215/4, VARIO		Rolling code
RIB	312.000	312A		
	433.920	433		
SKYLINK	433.920	R3 serie		Rolling code
SOMFY	433.420	Keytis NS 2 RTS, Keytis NS 4 RTS		Rolling code
SOMMER	868.800	TX03 868 04		Rolling code
TELECO	433.920	TXP, TXR, TXV, TXW, TVT series		Rolling code
WELLER	868.500	MT87A, MT87A4		Rolling code

**Pokud jste Váš ovladač nenalezli v seznamu, kontaktujte nás abychom
prověřili aktuální stav a případně navrhli řešení - obchod@vrat.cz**